

V 4.0 Digital PWM wiring

We have made a new revision to our Constant Current PWM. In this new release we have added a CAT5 connection and supplied a standard CAT5 5 cable with a connector at one end. This will make wiring the unit even easier. Simply strip back the CAT 5 wire to expose the color coded pairs. Power, Ground, and Frequency outputs no longer need to be connected manually to the board. This also simplifies splitting the frequency output signal to multiple PWM modules.

